

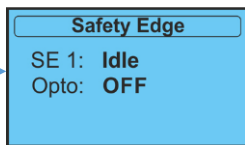
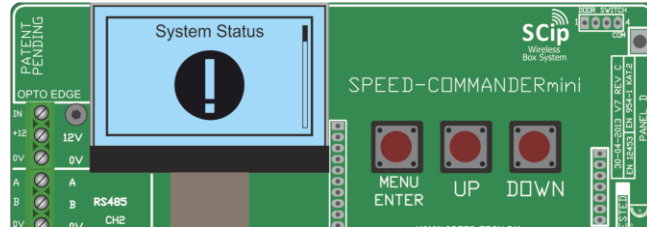


Checking Function Safety Edge Doorcontrol V7

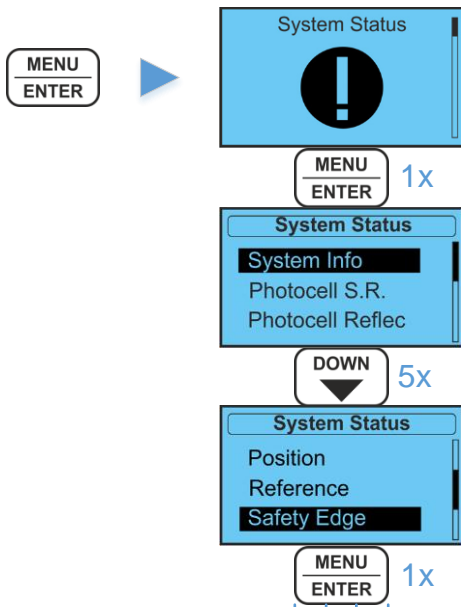


SE 1 = Safety Edge
Idle = Ok

Opto = Safety device with sender / receiver
OFF = Not Programmed

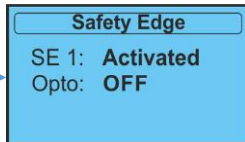


SE 1 = Safety Edge

Activated = The rubber is pressed / damaged
With wireless systems the batteries needs to be replaced

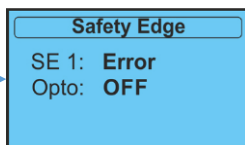

SE 1 = Safety Edge

Error = There is **NO** connection to the Safety Edge
Spiralcord is broken
Wiring is damaged between controller and Safety Edge

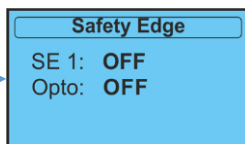

SE 1 = Safety Edge

OFF = Not Programmed

MENU ENTER Hold > 5 Sec
(to get back to the idle screen)