



# Diagram Doorcontrol V7

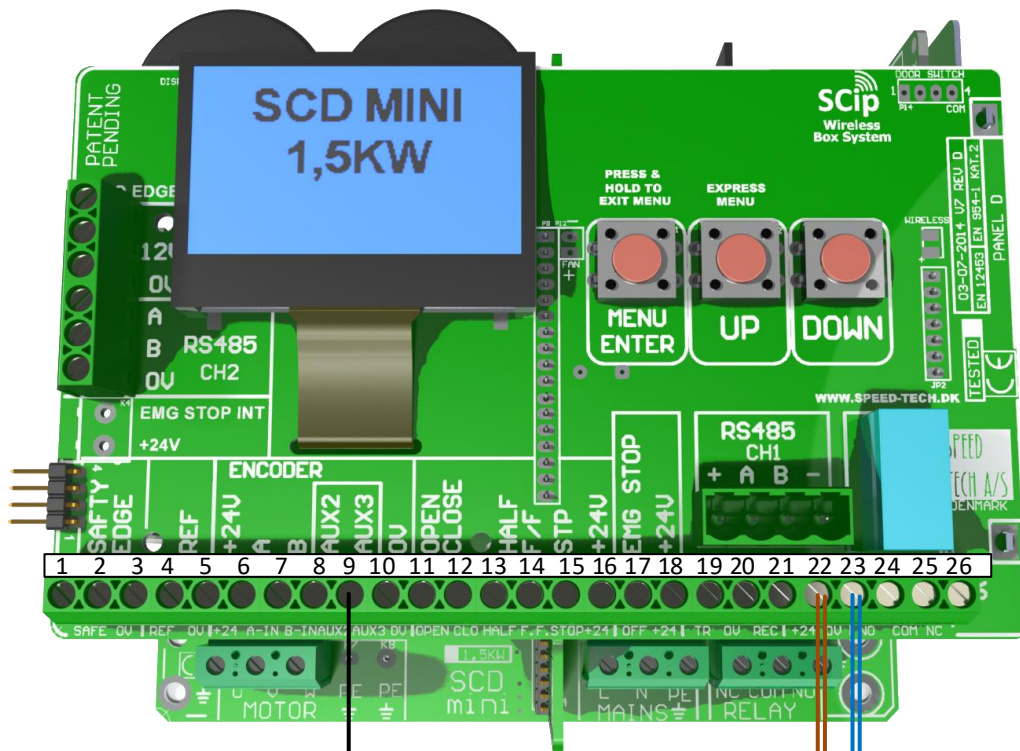

sender = SMT

receiver = RMT

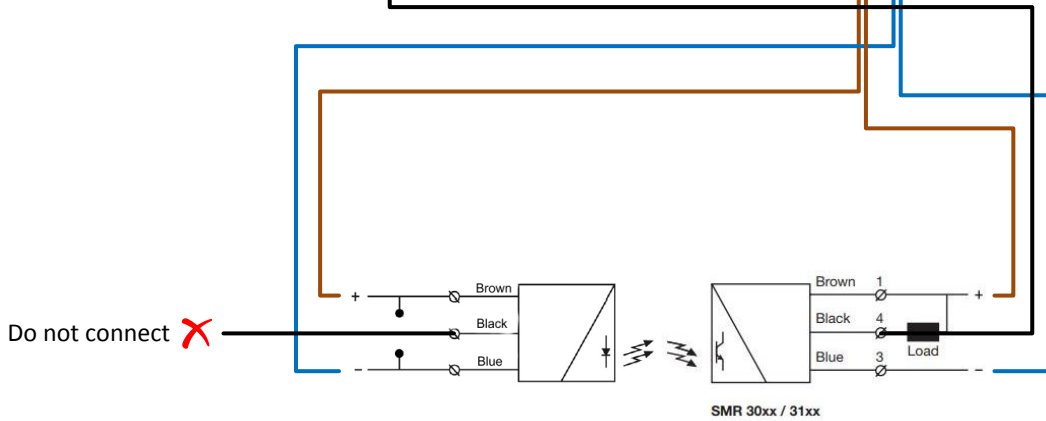

Photocell sender / receiver

Connect other components:

- 1+2 = 8.2Kohm resistance or a crash protection
- 4 = 0v
- 5 = 24v
- 6 = A signal (encoder)
- 7 = B signal (encoder)
- 8+5 = Motor stop/ thermal contact
- 9+16 = Photocell PNP (sender / receiver)
- 11 = Open
- 12 = Closed
- 13 = Half open
- 14 = Flip/Flop (Single-button control)
- 15+16 = Stop
- 16 = 24v
- 17 = Emergency stop
- 18 = 24v
- 20+21 = Photocell relay output