


# Set-up Auto Close Timer Doorcontrol Typ V7



MENU  
ENTER

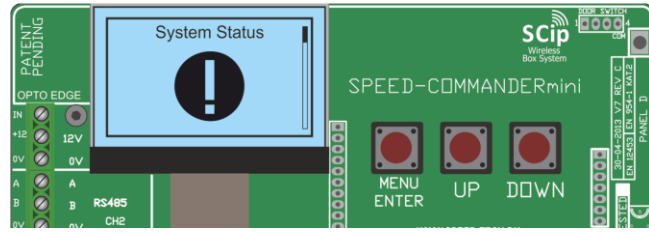

System Status

DOWN 3x

System Setup

MENU ENTER 1x

Enter Code

0

Menu Locked

UP or DOWN

Enter Code

41

MENU ENTER 1x

System Setup

Timers

Outputs

Inputs

MENU ENTER 1x

Timers

Auto Close

Run Timer

Timer 1

MENU ENTER 1x

Auto Close

0,0 Sec

(Timer auf 0,0 = aus)

UP or DOWN

Tasten halten für schnell vorwärts/ rückwärts

Auto Close

10,0 Sec

MENU ENTER 1x

Timers

Auto Close

Run Timer

Timer 1

DOWN 2x

Timers

Auto Close

Run Timer

Timer 1

MENU ENTER 1x

Timer1

Timer Value

Function

MENU ENTER

Timer1

0,0 Sec

UP or DOWN

Tasten halten für schnell vorwärts/ rückwärts

Timer 1

3,0 Sec

MENU ENTER 1x

Timer1

Timer Value

Function

DOWN 1x

Timer1

Timer Value

Function

MENU ENTER 1x

Function

No Function

Auto Close part 1

Auto Close part 2

UP or DOWN

Suchen Sie nach Safety Close

Function

Auto Close part 1

Auto Close part 2

Safety Close

MENU ENTER 1x

> 5 Sekunden gedrückt halten (zum Verlassen des Menüs)



Test Tür