


Configuration de la minuterie de fermeture automatique Doorcontrol type V7



MENU
ENTER

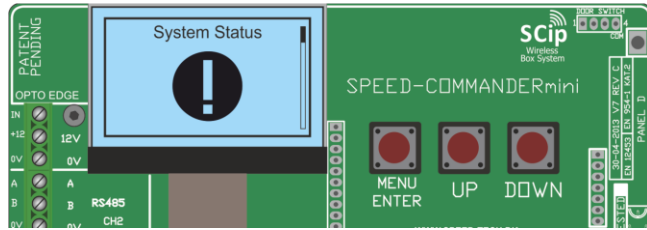

System Status

DOWN 3x

System Setup

MENU
ENTER 1x

Enter Code

0

Menu Locked

UP or DOWN

Enter Code

41

MENU
ENTER 1x

System Setup

Timers

Outputs

Inputs

MENU
ENTER 1x

Timers

Auto Close

Run Timer

Timer 1

MENU
ENTER 1x

Auto Close

0,0 Sec

(minuterie 0,0 = aus)

UP or DOWN

Bouton de maintien pour avance/retour rapide

Auto Close

10,0 Sec

MENU
ENTER 1x

Timers

Auto Close

Run Timer

Timer 1

DOWN 2x

Timers

Auto Close

Run Timer

Timer 1

MENU
ENTER 1x

Timer1

Timer Value

Function

MENU
ENTER

Timer1

0,0 Sec

UP or DOWN

Bouton de maintien pour avance/retour rapide

Timer 1

3,0 Sec

MENU
ENTER 1x

Timer1

Timer Value

Function

DOWN 1x

Timer1

Timer Value

Function

MENU
ENTER 1x

Function

No Function

Auto Close part 1

Auto Close part 2

UP or DOWN

Rechercher la sécurité Fermer

Function

Auto Close part 1

Auto Close part 2

Safety Close

MENU
ENTER 1x

MENU
ENTER

Maintenir > 5 Sec (pour sortir du menu)



Tester la porte